

Emjoi®

PediSmooth

for beautiful & smooth feet

Instruction Booklet

AP3RP

Please read these instructions
carefully and retain for future reference.



Emjoi's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR PEDISMOOTH

- Keep out of the reach of children.
- Do not use this product if it is broken or damaged.
- The Emjoi ® PediSmooth is ONLY for use on the feet and heels. Do not use this device anywhere else on the body.
- The appliance must only be used as described in this booklet.
- This appliance is for household use only.
- Only use the PediSmooth on dry skin.
- Do not immerse the product in water or any other liquid.
- Never use your unit if it has been damaged or submerged into water.
- Do not use if you have diabetes or poor blood circulation.
- If you have any skin conditions or other medical issues, or have a pace maker please consult with your physician prior to use.
- Do not use on the skin for more than 2-3 seconds at a time.
- Do not continually rub the unit on the same area or apply strong pressure.
- Do not use a PediSmooth roller that has worn or nicked edges around the roller.
- Change the PediSmooth roller as needed for best results.
- Do not use on skin that is red, irritated, inflamed, infected or blistered.
- Do not use on warts, sores or open wounds.
- Discontinue use immediately if you experience any pain or irritation.
- Seek medical attention if skin becomes severely irritated or bleeds.
- Do not use water or any other liquid on the PediSmooth rollers.
- Do not turn your unit on if the PediSmooth roller is not attached.

- To prevent accidents and injury to you or damage to the unit – when your PediSmooth is in use, keep it away from the hair on your scalp, your eyebrows, eyelashes, as well as clothes, brushes, wires, cords, shoelaces etc.
- If the appliance is not to be used for long periods, remove the batteries before storing.
- Once the batteries are dead, remove immediately and replace.
- As this is a personal care product, we recommend that it is used by one person only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is intended to be used in household, domestic and similar applications.

Ensure that the above safety precautions are understood by the user.

If you have any concerns regarding the performance and use of your appliance, please contact the Sunbeam Consumer Service Line.

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة أعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を再確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

 
کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ထုံစွာဖတ်ကာ စီမံကိန်းဘဝအတွက်အရေးကြီးသောစံနှုန်းများကို သေချာစွာ ဖော်ထုတ်ပါ။

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Features of your Emjoi PediSmooth

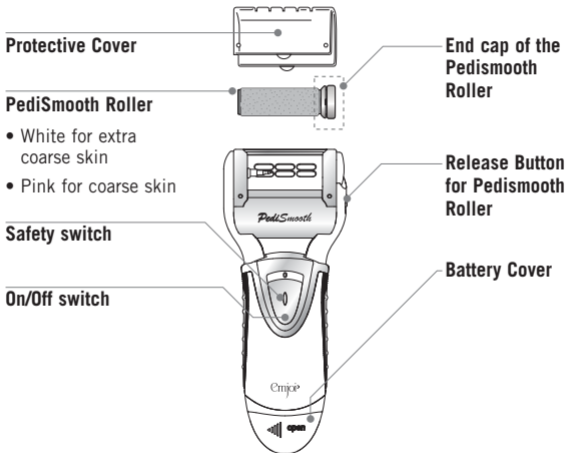

Using Your Emjoi PediSmooth

Before using your Emjoi PediSmooth, please read this instruction manual carefully and completely.

Inserting the batteries

- Remove the battery cover (at the base of the handle) by turning it 90 degrees to the left until it clicks into place (fig. 1) and then pull it down (fig.2)
- Insert 2 x AA batteries in the battery compartment. The images on the back of the unit indicate the correct battery direction.
- Close the battery cover by turning it 90 degrees to the right until it clicks into place.

Using your Emjoi PediSmooth

NOTE: The Emjoi® PediSmooth is ONLY for use on the feet and heels. Do not use this device anywhere else on the body.

Only use PediSmooth on dry skin.

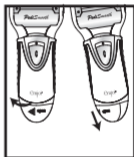


Figure 1

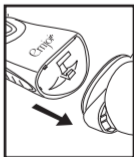


Figure 2

Do not use on broken or bleeding skin.

- Ensure that the skin is clean and dry.
- Select the PediSmooth roller you want to use and place it into the unit. See the 'Changing the PediSmooth Roller' section for instructions on how to remove and replace the roller.
- There are 2 types of PediSmooth Rollers available to customise your results:
 - White for extra coarse skin
 - Pink for coarse skin
- Remove the protective cover from the unit and it is ready to use
- To turn the unit on, firmly press the safety switch in the centre of the On/Off switch and at the same time slide it upwards.
- Gently rotate the unit (back and forth or side to side) over the callous/corn/hard skin area for 2-3 seconds.
- Do not press hard – gently glide the unit over the desired area or the unit will stop if it is pressed too hard on the skin.
- Turn the unit off and check if you have achieved the desired result in that area. If not, turn the unit on and go over the area for 2-3 more seconds and check again. Continue to use this method until the desired level of smoothness is achieved.

Warning: Stop if the skin becomes sore or inflamed.

Warning: Do not use on skin for more than 2-3 seconds at a time.

- To turn the unit off, slide the On/Off switch downwards.
- Rinse the skin or use a wet towel to get rid of the excess dead particles.
- To clean the Emjoi PediSmooth, see the 'Care and Cleaning' section or use the cleaning brush provided.
- Keep the protective cover on your unit when it is not in use.

Replacing the batteries

- To replace batteries, remove the battery cover then remove the old batteries and replace them with new batteries. Make sure that you insert batteries into your device properly, with the + (plus) and – (minus) terminals aligned correctly.
- Replace the battery cover.
- If Alkaline batteries are used, they can be safely disposed of with normal household waste when exhausted. If unsure, contact your local council with regards to the battery disposal practice in your area. Never dispose of batteries in fire as they could explode.
- Always wear eye protection and gloves when dealing with leaking batteries.

Changing the PediSmooth Rollers

- The PediSmooth roller contains fragile parts, please handle them with care.
 - Please take extra care when replacing the PediSmooth roller.
 - Pedisooth rollers that are broken or worn could cause damage to the skin.
 - Change the PediSmooth roller as needed for best result. The life of the rollers depend on frequency of use and size of area being treated. Replace as needed.
 - Replace the Emjoi® PediSmooth roller when you find any defects to the roller or when you find them less effective.
 - Make sure the unit is turned off before replacing the Pedisooth roller.
1. Pull down the release button on the side of the unit and the PediSmooth roller will pop out (fig. 3).

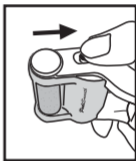


Figure 3

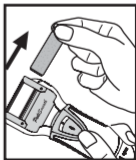


Figure 4

2. After the PediSmooth roller pops out, remove it from the cylinder holding the end cap of the PediSmooth roller (fig. 4).
3. Remove the replacement PediSmooth roller from the replacement container (fig. 5) by pressing the bottom with your pointer finger and catching it in the palm of your opposite hand.
4. Place the replacement PediSmooth roller into the unit until you hear a 'click' sound. Be sure to insert the new PediSmooth roller into the unit with the thinner side going into the unit (fig. 6 & 7)
5. After placing a new PediSmooth roller into the unit check that it has been firmly installed with no signs of shaky or loose parts.

For purchasing additional rollers, please contact the Sunbeam help line on 1300 881 861.

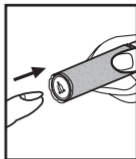 


Figure 5

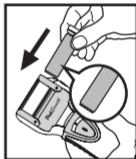 


Figure 6

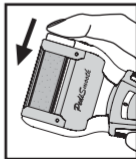 


Figure 7

Customer Service Line

If you have any additional questions about using your Emjoi PediSmooth, please call the Sunbeam Customer Service line in Australia on 1300 881 861. In New Zealand, please call 0800 786 232.

Care and Cleaning

The Emjoi® PediSmooth is water resistant. It can be rinsed under water for cleaning but it is not water proof. Do not submerge the unit into water as this may cause defects to the unit.

NOTE: PediSmooth rollers should not be placed into water.

1. Turn the unit off
2. Remove the protective cover and the PediSmooth roller from the unit.
3. Rinse the unit under the tap for 5-8 seconds. Wipe the body of the unit with a clean dry cloth.
4. Replace the protective cover.
5. Alternatively for quick cleaning after each use, brush the dead skin from the unit and rollers using the cleaning brush supplied.

12 Month Replacement Guarantee

Emjoi Epilators and other Emjoi products are distributed in Australia and New Zealand by Sunbeam Corporation Limited.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

In Australia, the benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian

Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

Australia

www.sunbeam.com.au

1300 881 861

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

www.sunbeam.co.nz

0800 786 232

26 Vestey Drive, Mt Wellington
Auckland, New Zealand

Made in China



Customer Service Line

Australia

1300 881 861

www.emjoi.com.au

New Zealand

0800 786 232