

emjoi®

# Diamond

facial & delicate area epilator

## Instruction Booklet

AY7D

Please read these instructions carefully  
and retain for future reference.



# Emjoi's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR DIAMOND

- Keep out of the reach of children.
- Do not use if the tweezers are broken or damaged.
- The appliance must only be used as described in this booklet.
- This appliance is for household use only.
- **Do not immerse the product in water or any other liquid.**

## Important instructions – retain for future use.

تأكد من تفهم الاحتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверте се дека погоре споменатите мерки на предпазливост се добро разбрани

Assegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کافی یکنید کہ احتیاطهای بالا حتماً درک بشوند

βεβαιώστε τις προφυλάξεις ασφαλείας που είναι περιγραφέντες

Yükarıda belirtilen güvenlik önlemlerinin anlaşılacağından emin olunuz


Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

- If the appliance is not to be used for long periods, remove the batteries before storing.
- Once the batteries are dead, remove immediately and replace.
- If you suffer from any of the following conditions, please see your health care provider before using the Emjoi Diamond – acne, moles, diabetes, during pregnancy, eczema, hemophilia, immune deficiency, psoriasis, varicose veins or wounds.
- Do not use this unit where it can come into contact with the scalp, clothing and shoelaces to avoid personal injury and damage to the unit.
- Use only on clean, dry skin.
- This product has not been designed for use on the eyebrows.
- As this is a personal care product, we recommend that it is used by one person only.
- The Emjoi Diamond has been specifically designed for use on delicate areas. However, use of an epilator may cause reddening or irritation to the skin. This is a normal reaction which will quickly disappear. However if the irritation remains for more than three days, please see your health care practitioner.

Ensure that the above safety precautions are understood.

**If you have any concerns regarding the performance and use of your appliance, please contact the Sunbeam Consumer Service Line.**

# Features of your Emjoi Diamond

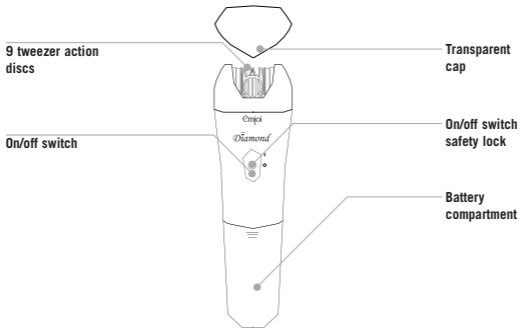

# Using your Emjoi Diamond

## Inserting the batteries

- Open the battery cover.
- Insert 2 x AAA batteries as indicated inside the battery compartment.
- When the batteries are in position, replace the battery cover.

## Using your Emjoi Diamond

- Before using Emjoi Diamond for the first time, we recommend that you familiarise yourself with how the appliance feels on the skin. Try the unit on the back of the hand before using it on delicate areas such as the face.
- Ensure that the skin is clean and dry. Do not use over body lotions or moisturisers. Use in a location that has a comfortable temperature to avoid perspiration.
- When removing hair it is very important to hold the skin very taut to avoid pinching.
- The appliance can be used to remove individual facial hair, on the upper lip, chin and cheek area.
- Important: Take extra care when using the Emjoi Diamond on the upper lip. Hold the skin very taut by gently pulling down on the area with your fingers.
- Do not use the Emjoi Diamond on eyebrows. It can be used in between your eyebrows.

- It can also be used on legs, underarms and the bikini line as a touch up.
- If hair is longer than 5mm, trim with scissors before use.
- To turn on the appliance, press the on/off switch safety lock and at the same time slide it up to the position labelled **I**.
- Once the appliance is in the on position hold at a 90 degree angle to the area you wish to remove hair, and glide it in short quick strokes against the direction of the hair growth.
- There is no need to apply pressure. If too much pressure is applied, the Emjoi Diamond is designed to stop.
- To turn the appliance off slide the on/off switch down to the off position labelled **O**.

### **Replacing your batteries**

- To replace batteries, slide the battery cover from its original position then remove the old batteries and replace them with new batteries (make sure that you insert batteries into your device properly, with the + (plus) and – (minus) terminals aligned correctly.) Finally slide the cover back on. Different types of batteries or new and used batteries are not to be mixed.
- If Alkaline batteries are used, they can be safely disposed of with normal household waste when exhausted. If unsure, contact your local council with regards to battery disposal practice in your area. Never dispose of batteries in fire as they could explode.
- Always wear eye protection and gloves when dealing with leaking batteries.

# Help Line

If you have any additional questions about using your Emjoi Diamond, please call the Sunbeam help line in Australia on 1300 881 861. In New Zealand, please call 0800 786 232.

## Care and Cleaning

- Do not immerse the appliance in water or any other liquid.
- To clean the exterior, simply wipe over with a dampened cloth and wipe dry.
- After each use gently remove hairs from the tweezers using the cleaning brush supplied.
- Occasionally clean the tweezers by wiping with a cotton bud that has been dipped in alcohol. Remove any residue alcohol before using again.

Emjoi epilators are distributed in Australia and New Zealand by Sunbeam Corporation Limited.

If you have any concerns regarding the performance and use of your Emjoi appliance, please contact the Sunbeam Customer Service Line.

Made in China.

Backed by Sunbeam's 2 year replacement guarantee and National Service network.

For more information or advice on this appliance, please contact the Sunbeam Customer Service Line

**Australia 1300 881 861**

**New Zealand 0800 786 232**



## Consumer Hotline

Australia

1300 881 861

[www.emjoi.com.au](http://www.emjoi.com.au)

New Zealand

0800 786 232